This user manual describes all proceedings concerning the Full Electric Injection Molding Machine in detail as much as possible. However, it is impractical to give particular descriptions for all unnecessary or unallowable system operations due to the manual text limit, product specific applications and other causes. Therefore, the proceedings not indicated herein should be considered impractical or unallowable.

This User Manual is only suitable for both power and drive modules of AE50 Full Electric Injection Molding Machine for specified drive unit. It is better to refer to the material object or touch GSK because some different description may occur along with the alternation of the production.

This user manual is the property of GSK CNC Equipment Co., Ltd. All rights are reserved. It is against the law for any organization or individual to publish or reprint this manual without the express written permission of GSK and the latter reserves the right to ascertain their legal liability.

PREFACE

Your Excellency,

It's our pleasure for your patronage and purchase of the AE50 Full Electric Injection Molding Machine Drive Unit made by GSK CNC Equipment Co., Ltd.

This user manual is fully described the function and operation methods of power and drive modules of AE50 Full Electric Injection Molding Machine Specified for Drive unit; so that the user can entirely understand the integrated drive unit, and use it safely and effectively.

SECURITY WARNING

Improper operation may generate accident, the person who can operate this product with the corresponding qualification.

In order to guarantee the product safety, normal and effective operation; it is important to read this manual before installing or using product.

It is very essential to note the following marks when you read this user manual



g It means that the wrong operation may cause the disaster result —— death or serious injury.



It means that the wrong operation may cause hurt the operator, as well damage the equipment.



e It means that improper use may damage the product and device.

Safety Precaution

- Transportation and storage
 - The stack of product cartons should be less than 6 layers.
 - Do not climb, stand and place the heavy matters on the cartons.
 - Do not use the cable connected with the product to drag or transport the product.
 - Do not impact and scratch the panel and the display screen.
 - Keep away the damp, sunshine and rain of the cartons.
- Unpacking inspection
 - Confirm whether the product is the one you purchased after unpacking.
 - Check whether the product is damaged during transporting.
 - Confirm the components are completed and without damage based upon the list.
 - It is better to contact our company immediately if the inconsistent product type, absent accessory or damage due to transportation.
- Wiring
 - The person who attends to the wiring and inspection should be the professional with corresponding ability.
 - The product should be reliably grounded, and its grounding resistance should be less than 0.1Ω; do not use the neutral conductor (zero line) to instead the grounding cable.
 - The wiring should be correct and firm, in order to avoid the product fault or unexpected result occurs.
 - The surge absorber diode with the product should be connected with the specified direction; otherwise, the product may be damaged.
 - It is necessary to cut off the product power before performing the plug or open the product case.

会广→州数控 The Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual

Inspection & Repair

- It is important to cut off the power before inspecting.
- Check whether the machine is fault when short-circuit or overloading occurs. Restart can be performed after the fault is eliminated.
- Do not frequently perform the ON/OFF to the product; it is better to wait for 1min at least when restarting it after the power is turned off.

Security Responsibility

Security responsibility of the manufacturer

- ——Manufacturer should take responsibility for the design and structure danger of the drive unit and the accessories which have been eliminated and/or controlled.
- ——Manufacturer should take responsibility for the security of the drive unit and accessories.
- ——Manufacturer should take responsibility for the offered information and suggestions for the user.

Security responsibility of the users

- ——User should know and understand about the contents of security operations by learning and training the security operations of the motor.
- ——User should take responsibility for the security and danger because of increasing, changing or modifying the original motor or accessory by themselves.
- ——User should take responsibility for the danger without following the operations, maintenances, installations and storages described in the manual.

Safety warning



- The design and manufacture of this product is not used in the machinery and system threatening for personal safety.
- It is necessary to consider the safety protective measure in the design and manufacture when the machinery and system of user selects this product; prevent the unexpected accident from improper operation or abnormal product.

Confirmation



• Never attempt to use the damaged or faulted products.

Transportation



- It is necessary to store and transport based upon the products storage and transportation environment
- Do not pile it up higher, prevent from dropping
- The product should be packed integrally.
- Do not drag the cable, motor axis and encoder transportation servo motor.
- The specified drive unit of AE50 full electric injection molding machine and servo motor can not undergo the foreign force and impact.

Installation



The power module, drive module and servo motor in the specified drive unit of AE50 full electric injection molding machine:

- Do not install it on/close the flammable matter to avoid fire.
- Avoid vibration; keep away impacting
- Do not install it when the components are damaged or absent.

The specified drive unit of AE50 full electric injection molding machine:

- It must be installed inside the defense level ≥IP43 controllable cabinet.
- Keep adequate space from other equipment.

- It should have good radiating condition.
- To prevent the dust, corrosion gas, conductor, liquid, flammable and explosive matters from entering.

Servo motor:

- The installation should be firmed to avoid releasing because the vibration.
- Prevent the motor and encoder is being damaged from liquid invading.
- Never attempt to knock the motor and motor axis, to avoid the damage of encoder.
- Motor axis can not bear the overloading.

Wiring



- The person who attends the wiring or inspection should have adequate ability for this job.
- The wiring and inspection should be performed after the power is turned off for 5min.
- The power module, drive module and servo motor of AE50 full electric injection molding machine for the specified drive unit should be grounded.
- Incorrect voltage or power polarity may cause explosion or operation accident.
- The wiring of AE50 full electric injection molding machine can be performed after the motor power module, drive module and servo motor are installed.
- Ensure that the cable is insulation; avoid pressing the cable, so as not to electric shock.



- The wiring should be correct and firmed, otherwise, the servo motor may be operated incorrectly, as well, and the device may be damaged due to poor connection.
- Servo motor U, V and W terminals can not be connected reversely and the AC power.
- The servo motor should be connected directly with drive module, which can not connect with the capacitor, inductor or filter.
- Prevent the conducting fastener and cable head from entering the drive unit.
- The cable and heat-resistance-matter can not close to the radiator and servo motor of the drive unit.
- The fly-wheel diode connected in parallel on the output DC relay can not be connected reversely.

Debugging operation




- Confirm whether the power module, drive module and servo motor is already installed, and firmed before the power is turned on; and check whether its power and wiring are correct.
- The servo motor should be operated without loading before debugging. The loading debugging can be performed after the parameter setting is confirmed. Prevent the machinery and equipment damage from the fault operation.

Usage



- An ESP circuit should be connected to ensure that the equipment can be immediately stopped and the power can be cut off soon when an unexpected accident occurs.
- It is necessary to confirm the operation signal is already turned off before an alarm is reset; otherwise, it may suddenly start again.
- The specified drive unit of AE50 full electric injection molding machine should be matched with the specified servo motor.
- Do not frequently switch on/off the power module to prevent the system from damaging.
- The power module, drive module and servo motor of the AE50 full electric injection molding machine for the specified drive unit may be heated after it continues to operate. Never attempt to touch the radiator and motor of the drive unit when operating or after the power is turned off for a while.
- Do not refit the power and drive modules.

Troubleshooting

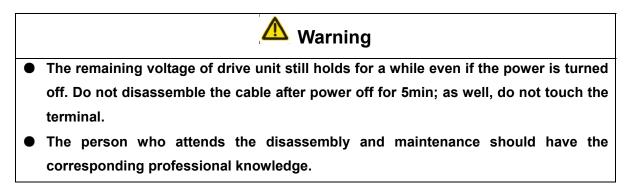



- It is necessary to remove the fault reason when alarm occurs. Perform the restart alarm signal before restarting it.
- Far away from the machine when instantaneous stop occurs and after the power is turned on again, because the machine may suddenly start (The design of the machine should be without hazard when restart.

Option



- The rated torque of servo motor should be higher the enabled consecutive loading one.
- The moment of inertia value is divided by the motor one, which should be less than the recommended value.
- The specified drive unit of AE50 full electric injection molding machine should be adapted with the servo motor.

All specifications and designs are subject to change without notice.

This manual is reserved by final user.

Chinese version of all technical documents in Chinese and English languages is regarded as final.

Sincere thanks for your supporting of GSK's products.

LIST

CHAPTER ONE SUMMARY 1.1 Product Brief 1.2 Drive Unit Module Explanation 1.3 Delivered Inspection 1.4 Product Appearance	·· 1 ·· 2 ·· 2
CHAPTER TWO INSTALLATION 2.1 Environment Condition 2.2 The Appearance Dimension and Installation of Drive Unit 2.3 Servo Motor Installation	·· 7 ·· 8 ·11
CHAPTER THREE WIRING 3.1 Power Module Wiring 3.2 Power Module Terminal Function 3.3 The Wiring of Drive Module 3.4 Drive Module Terminal Function 3.5 I/O Interface Circuit 3.6 The Overall Connection Diagram of Drive Unit	13 14 15 18 25 28
CHAPTER FOUR PARAMETER	29
CHAPTER FIVE ALARM AND TROUBLESHOOTING 5.1 Alarm List 5.2 Alarm Troubleshooting Method	33
CHAPTER SIX DISPLAY AND OPERATION 6.1 Power Module Display 6.2 The Keyboard Operation of Drive Module 6.3 The Monitoring Method of Drive Module 6.4 Speed Dry Run and JOG Operation 6.5 Analog Speed Operation 6.6 Analog Torque Operation 6.7 Analog Speed + Analog Torque Operation 6.8 Other Control Methods 6.9 Analog Value Input Command Zero	39 39 40 42 43 43 44 44
CHAPTER SEVEN POWER-ON OPERATION	45 47
CHAPTER EIGHT PRODUCT TECHNOLOGY SPECIFICATION	49

CHAPTER ONE SUMMARY

1.1 Product Brief

The Specified Drive Unit of AE50 Full Electric Injection Molding Machine (it is also called AE50 Full-Digital Full Electric Injection Molding Machine Specified Drive Unit) is a new full-digital drive unit product of GSK, which is used high-performance 32-bit Digital Signal Processor (DSP), Field Programmable Gate Array (FPGA) and MITUBISHI Intelligent Power Module (IPM). It owns the high integration, small size, completed protection, perfect reliability, and it uses the optimal PID calculation and performs the PWM control. Its performance has been reached to the advanced level comparing the similar product with the domestic and overseas.

The power and drive modules in the specified drive unit of AE50 full electric injection molding machine should be matched, which is used on the new high-efficient and energy-saving digital full electric injection molding machine of GSK.

It owns more advantages comparing with the traditional control system.

Low energy-consumption

It greatly saves the electric energy and reduces the production cost, which saves $20\% \sim 50\%$ comparing with the traditional control method.

High control accuracy

The servo drive system and closed-loop is configured 17-bit absolute encoder, and its repeated accuracy is greatly improved.

Excellent consecutive packing and low-velocity performance

The packing time of servo control system is longer and its pressure is more stable comparing with the traditional one. It is stable with low velocity and its conversion speed is steady.

High response velocity

The response velocity of the servo control system is fast, and the pressure response time is extremely short.

1.2 Drive Unit Module Explanation

Description	Explanation
Power module (Also, it is called drive unit power module)	Perform AC-DC conversion function, turn 3-phase AC380V into DC538V offering the DC to drive module. It means DTS02A-POW in AE50.
Drive module (Also, it is called drive unit drive module)	Perform DC-AC conversion function, turn DC538V into alterable voltage and frequence 3-phase AC outputting to the servo motor. It is the overall of the DTS01A-050, DTS01A-075, DTS01A-075 and DTS01A-300 in AE50.
Drive unit (Also, it is called motor drive unit or servo drive unit)	It is combined by drive unit power module and drive module; It is the overall of the DTS02A-POW, DTS01A-050, DTS01A-075, DTS01A-075 and DTS01A-300 in AE50.

1.3 Delivered Inspection

1) It is better to inspect immediately based upon the following items after receiving goods. If you have any questions, touch the supplier or our company.


Inspection item	Remark
Check the drive unit and servo motor; confirm	It is better to confirm based upon the drive unit
whether the matched goods are the ordered one.	mark and servo motor nameplate.
Check whether the goods are damaged during	Check the overall appearance of the goods, and
transportation.	it should be integrated and perfect.
Check whether the cable is released.	Check whether it is loosened by slightly shake.
Check whether the screw is loosened.	Check whether it is loosened by screwdriver.




- The damaged or absent component of the servo drive unit can not be installed.
- The specified drive unit of AE50 full electric injection molding machine should be matched with servo motor with its corresponding performance.
- Please touch the supplier or our company, if you have any questions after you received the goods.

2) Type meaning

 (1) Power module type in the specified drive unit of AE50 full electric injection molding machine **DTS02A- POW**

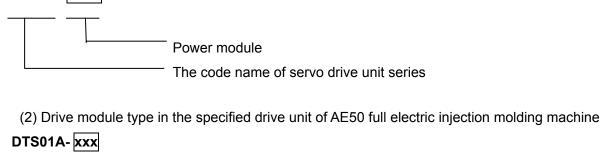



(3) Servo motor type

The specified drive unit of AE50 full electric injection molding machine is the motor drive unit matched wit the full electric injection molding machine, which is developed by GSK, as well the motor. The Chapter Eight offers the data of GSK SJT series servo motor; and other data of the servo motor is supplied with its servo motor.

3) Accessory

(2) The standard accessories of the specified drive unit of AE50 full electric injection molding machine

1	User Manual (This manual)	1 copy
---	---------------------------	--------

- ② CN1 (50-core high density plug)4 sets (Note 1)
- ③ CN2 (26-core high density plug) 4 sets (Note 2)

Note 1: It is better to adapted with the signal cable (3m) when matching with our control system.

Note 2: User can select the feedback cable (3m) when we offer the servo motor.

(2) The basis accessory of servo motor is supplied according to the servo motor user manual

1.4 Product Appearance

1) The appearance figure of power module



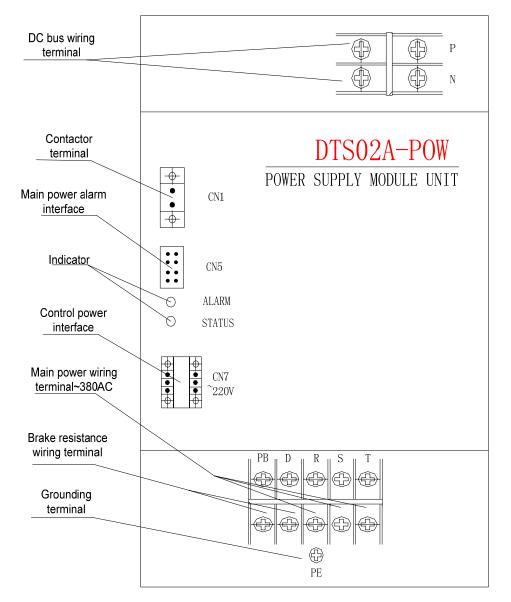


Fig. 1-1 The power module appearance of AE50 full electric injection molding machine specified drive unit

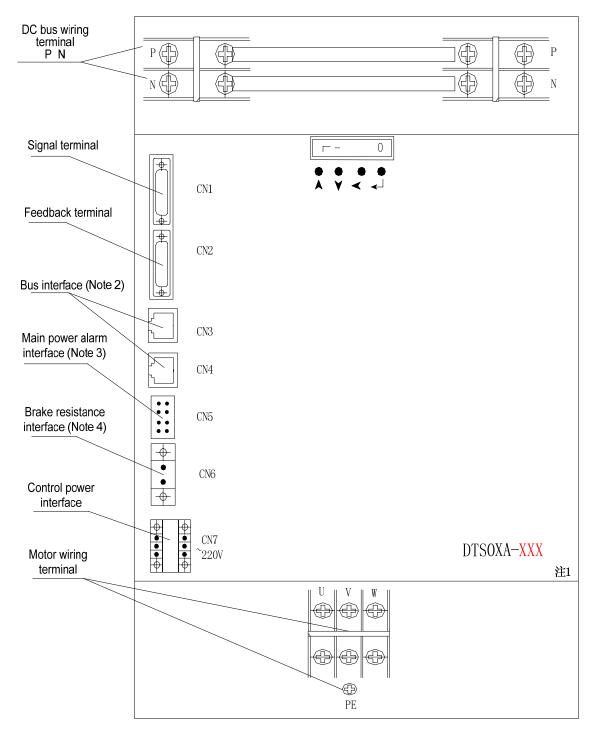

 2) The appearance figure of drive module



- **Note 1:** There are 4 standard configuration drive modules of the AE50 full electric injection molding machine, DTS0XA-XXX means any of the DTS01A-050, DTS01A-075, DTS01A-075 and DTS01A-300. The drive unit may different depending on the alteration of the injection molding machine; it is better to contact the factory or refer to the entity.
- Note 2: The bus interface CN3 and CN4 are not used yet, which are reserved for upgrading later.
- **Note 3:** The power module alarm interface is connected with the DTS01A-300 drive module CN5, which is reserved in other type drive unit modules.
- Note 4: The brake resistance interface CN6 in DTS01A-05 is reserved.

3) Servo motor appearance

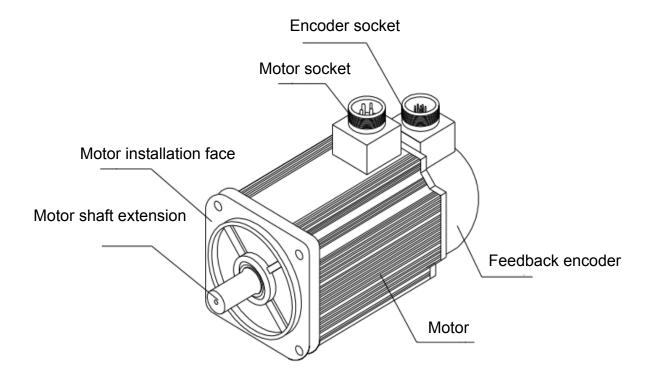


Fig. 1-3 SJT series servo motor appearance

CHAPTER TWO INSTALLATION



- The storage and installation of the product should be suitable for the environment condition.
- The pile quantity of the product is restrained, which can not pile too much, to prevent damage and drop from pressing.
- The storage and transportation of the product should be used the original package.
- The damaged or absent component of the product can not be installed.
- The installation of the product should be used the fire-proof material; do not install on the flammable surface or neighbor to avoid the fire hazard.
- The specified drive unit of AE50 full electric injection molding machine should be installed inside the electric cabinet to prevent the dust, corrosive gas, conducting material, liquid and flammable matter from entering.
- The power module, drive module and servo motor in the AE50 full electric injection molding machine specified drive unit should be avoided the vibration and impacting.
- Do not drag the servo motor cable, motor shaft and encoder.

ltem	The specified drive unit of AE50 full electric injection molding machine	GSK SJT series servo motor
Usage temperature/ Humidity	0℃~+55℃ (without freeze) Below 95%RH (Without condensation)	-20℃~+40℃ (without freeze) Below 90%RH (Without condensation)
Storage & transportation temperature/ humidity	-40℃~+55℃ 95%RH (Without condensation)	-40℃~+70℃ Below 80%RH (Without condensation)
Atmosphere environment Altitude height	There is no corrosive gas, flammable gas, oil mist and dust etc. inside the controllable cabinet. Under altitude 1000m	There is no corrosive gas, flammable gas, oil mist and dust etc. inside the indoor (without sunshine). Under altitude 2000m
Vibration	Less than 0.5G (4.9m/s ²), 10	Hz \sim 60Hz (Non-consecutive operation)
Defense level	It is installed inside the electric cabinet with ≥IP43	IP65

2.1 Environment Condition

2.2 The Appearance Dimension and Installation of Drive Unit



- The specified drive unit of AE50 full electric injection molding machine should be installed inside the electric cabinet with perfect protection.
- The specified drive unit of AE50 full electric injection molding machine should be installed according to the specified direction and interval to guarantee a good radiating condition.
- Do not install on/clear the flammable material to avoid fire hazard.

1) Installation environment

(1) Defense

The structure of the specified drive unit of AE50 full electric injection molding machine is without defense, and therefore, it should be installed inside the electric cabinet with good protective to avoid touching the corrosive or flammable gas; prevent the conducting material, metal dust, oil mist and liquid from entering it.

(2) Temperature, humidity

Environment temperature $0^{\circ}C \sim +55^{\circ}C$, the consecutive safety working temperature is below the $45^{\circ}C$. In order to guarantee the ambient temperature around the specified drive unit of AE50 full electric injection molding machine is not consecutively raised, the draft should be blown to the radiator of the drive unit.

(3) Vibration and impacting

The installation of the specified drive unit of AE50 full electric injection molding machine can not vibrate; the vibration should be controlled under $0.5G(4.9m/s^2)$ with some damping measure. The installation of the drive unit can not undertake the over-pressure and impacting.

2) Appearance dimension

The AE50 full electric injection molding machine produced by GSK is suitable for one power module and three drive modules, which separately corresponds to DTS02A-POW, DTS01A-050, DTS01A-075 and DTS01A-300. User can adapt the baseplate or panel installation method, and the installation direction is vertical to the installation face upward (Refer to the Fig. 2-1 The dimension figure of drive unit installation board aperture)

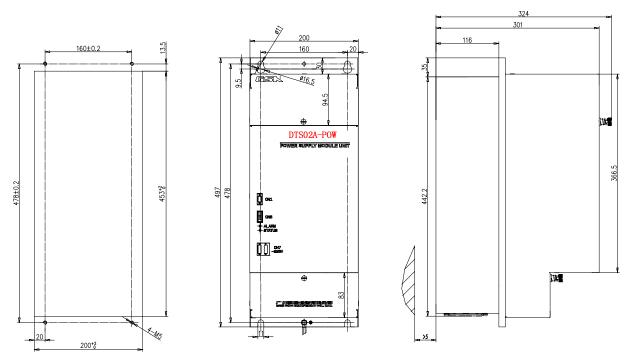


Fig. 2-1 The aperture dimension of DTS02A-POW

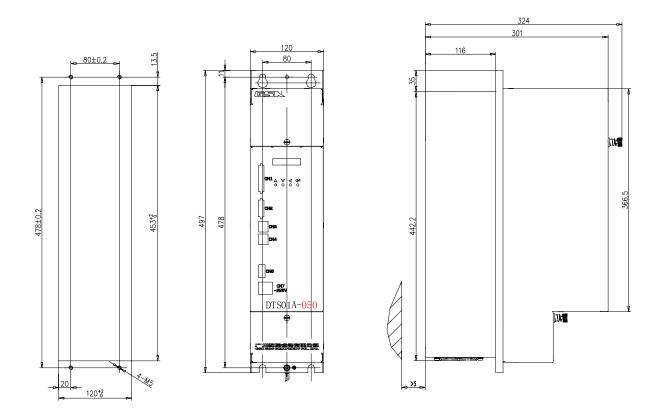


Fig. 2-1(b) The aperture dimension of DTS01A-05

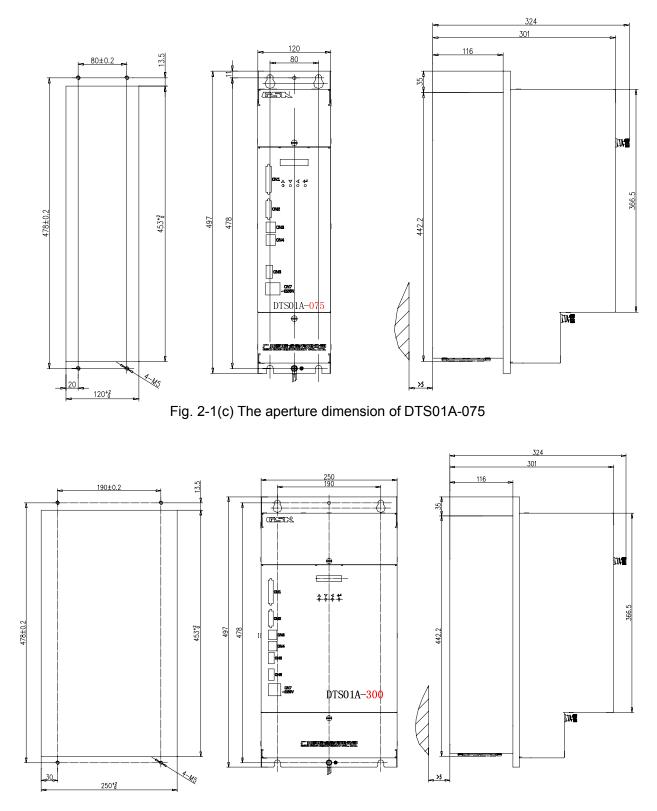


Fig. 2-1(d) The aperture dimension of DTS01A-300

2.3 Servo Motor Installation



- Never knock the motor shaft or encoder, prevent the motor from vibrating or impacting.
- Do not drag the motor shaft, leading-out cable or encoder when moving the motor.
- The motor shaft can not be undertaken the overloading; otherwise, it the motor may be damaged.
- The motor installation should be firmed with the locking measure.

1) Installation environment

(1) Defense

The GSK SJT series servo motor is not water-proof, and therefore to prevent the liquid from splashing to the motor, and avoid the oil or water entering the motor from its leading wire and motor shaft.

Note: If user needs the water-proof motor, it is better to give an indication.

(2) Temperature, humidity

The ambient temperature holds $-20^{\circ}C \sim +40^{\circ}C$ (without freeze). The motor may heat due to the long-term operation; it is better to radiating the motor if the narrow space or the heat equipment is around it.

The humidity should be less than 90%RH and without condensation.

(3) Vibration

The servo motor should be avoided to install at the vibration situation, and the vibration should be less than or equals to $0.5G (4.9m/s^2)$.

2) Installation method

(1) Installation method

The SJT series motor uses flange installation method, and motor installation direction is arbitrary.

(2) Installation notice


 Never knock the motor or motor shaft when disassembling the belt wheel to prevent the encoder from damaging. It is better to disassemble it by the screw-type push/pull tool.

- SJT series motor can not endure a huge axis/radial direction loading. It is recommended to connect the loading with spring coupling.
- The motor should be fixed by check washer to prevent the motor from loosening.

CHAPTER THREE WIRING



- The person who attends the wiring or inspection should have adequate ability to deal with this job.
- The wiring and inspection should be performed after the power is turned off for 5min to avoid electric shock.

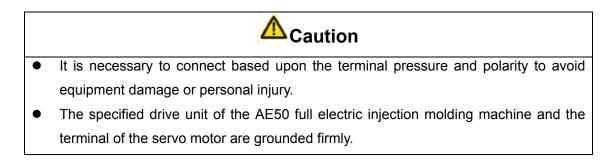

3.1 Power Module Wiring

Fig. 3-1 shows the configuration of DTS02A-POW interface terminal.

 Wire diameter: R, S, T, PE, P and N terminal wire diameter ≥ 10mm² (Copper wire), PB and D terminal wire diameter ≥ 2.5mm² (Copper wire).

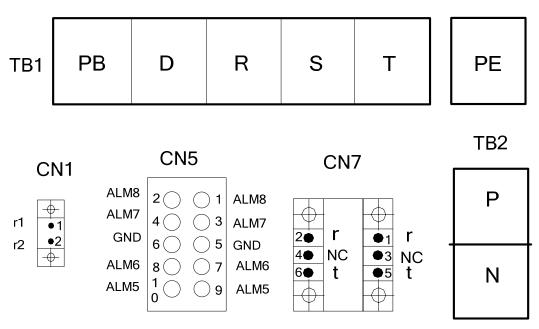


Fig. 3-1 DTS02A-POW terminal figure

3.2 Power Module Terminal Function

Terminal No.	Terminal mark	Signal name	Function		
TB1-1	PB		Brake resistance uses to the dynamic		
TB1-2	D	Brake resistance terminal	braking. Power module can be normally operated after connecting the external brake resistance; PB and D can not be connected directly.		
TB1-3	R	Main aircuit nowar input	Main aircuit nowar inpute 2 phase AC		
TB1-4	S	Main circuit power input terminal	Main circuit power inputs 3-phase AC 380V		
TB1-5	Т	terrindi	300 V		
TB1-6	PE	Protective grounding terminal	It is connected with the power grounding and motor one, and its protective grounding resistance should be less than or equals to 0.1Ω .		
TB2-1	Р	DC positive terminal	Output DC 538V		
TB2-2	Ν	DC negative terminal			
CN1-1	r1	Contactor control terminal 1	It is used for controlling the main circuit power input of the power module. The		
CN1-2	r2	Contactor control terminal 2	main circuit power is turned off when drive unit fault occurs.		
CN5-1	ALM8	Main circuit open-phase			
CN5-2	ALIVIO	alarm	Alarm signal output		
CN5-3	ALM 7	Main circuit brake alarm	Alarm signal output		
CN5-4					
CN5-5	GND	Alarm signal grounding	Alarm signal grounding		
CN5-6	OND	, lann olghar grounding			
CN5-7	ALM 6	Main circuit under-voltage	Alarm signal output		
CN5-8	, (EIII 0	alarm			
CN5-9	ALM 5	Main circuit over-voltage	Alarm signal output		
CN5-10	/ LIVI O	alarm	, ann oighar oatpat		
CN7-1	r		The control circuit power input/output		
CN7-2		Single-phase control	terminal AC 220V 50Hz is connected with the r, t of the drive module CN7.		
CN7-5	t	power			
CN7-6					
CN7-3	NC		Without connecting the reservation		
CN7-4					

Table 3-1 Terminal function explanation of DTS02A-POW

3.3 The Wiring of Drive Module

1) The external wiring figure of drive module

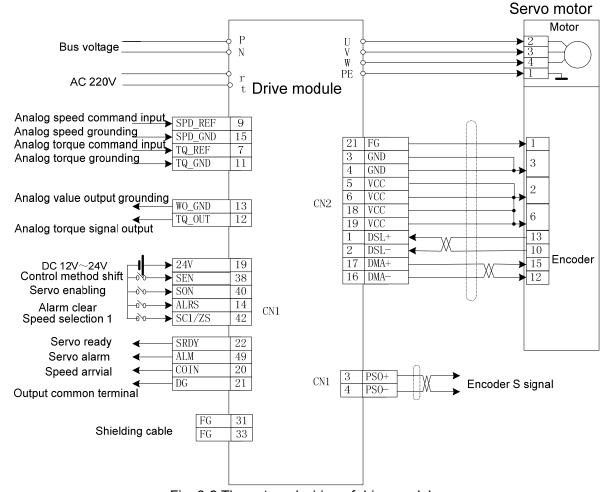


Fig. 3-2 The external wiring of drive module

2) Drive module interface explanation

(1) The power terminal TB3, TB4 in drive module

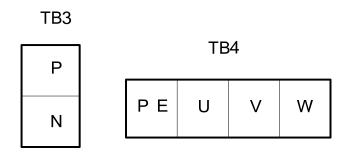


Fig. 3-3 The power terminal in drive unit


Terminal name	DTS01A-300	DTS01A-075	DTS01A-075	DTS01A-050	
P, N (mm ²)	10				
U, V, W, PE (mm ²)	10	1.5	2.5	1	
R, t (mm ²)		1			

Table 3-2 The external leading-wire diameter on each drive module in AE50

Note: The abovementioned leading-wire is used the copper wire.

(2) Control signal CN1

CN1 is 50-core high density plug, and its pin definition is shown below:

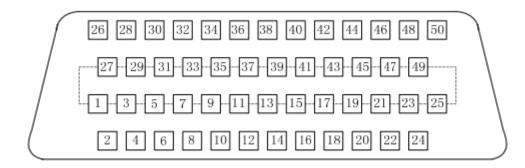


		ſ		r	1			1		1	
			1	NC					26	NC	
2	NC		3	PSO+	Absolute encoder	27	NC		28	NC	
4	PSO-	Absolute encoder S-			S+phase	29	NC				
6	NC	phase	5	NC		31	FG	Shielding grounding	30	NC	
		ļ	7	TQ_REF			FG	cable terminal Shielding	32	NC	
8	NC			SPD	input Analog speed	33	FG	grounding cable terminal			
10	NC		9	REF	signal input	35	NC		34	NC	
	то		11	TQ GND	Analog torque grounding				36	NC	
12	TQ_ OUT	Analog torque signal output	13	wo_	Analog value output	37	NC		38	SEN	Control
14	ALRS	Alarm clear		GND	grounding	39	NC				method shift
			15	SPD_ GND	Analog speed grounding				40	SON	Servo enabling
16	NC		17	NC		41	NC		42	SC1/ZS	Speed selection 1
18	NC				Input terminal	43	NC				input
20	SCMP	Speed arrival	19	COM+	'power+	45	NC		44	NC	
		output	21	DG	Output terminal				46	NC	
22	SRDY	Servo ready output			common port	47	NC		48		
24	NC		23	NC		49	ALM	Servo alarm	48	NC	
			25	NC				output	50	NC	
		l									

- Wire diameter: It adopts the shielding cable (It is better to use the twisted shielding cable); its wire diameter ≥ 0.12mm², and the shielding layer should be connected with FG terminal.
- Wire length: The cable should be shortened as much as possible, and the control CN1 cable should be less than 3m.
- Wiring: It is better to depart from the dynamic wire to prevent the interference from entering.
- Install the surge absorber component of the sensitive parts (coils) in the corresponding circuit: DC coil reverse parallel fly-wheel diode, AC coil parallel resistance-capacitance absorption circuit.

(3) Encoder feedback signal terminal CN2

The encoder feedback signal terminal CN2 is 26-core high density plug, which is matched with the 17bit absolute encoder; and its pin distribution is shown below:

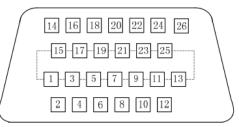


			1	DSL+	Encoder				14	NC	
2	DSL-	Encoder DSL-		-	DSL+input	15	NC				
		input	3	GND	Power output				16	DMA-	Encoder DMA-output
4	GND	Power output			grounding	17	DMA+	Encoder			DiviA-Output
4	GND	grounding	5	vcc	Power output		DMAT	DMA+output	18	VCC	Power output
6	vcc	Power output				19	VCC	Power output			
	100		7	NC		15	100	i ower output	20	NC	
8	NC		'	NC		21	FG	Shielding	20	NO	
o	NC		9	NC		21		grounding cable terminal	22	NC	
10	NC		-			23	NC				
10	NC		11	NC		23	NC		24	NC	
12	NC					25	NC				
12			13	NC		20			26	NC	
	•		.5					•	_0		




- Wire diameter: It adopts the shielding cable (It is better to use the twisted shielding cable);
 its wire diameter ≥ 0.12mm², and the shielding layer should be connected with FG terminal.
- Wire length: The cable should be shortened as much as possible, and the control CN2 cable should be less than 20m.
- Wiring: It is better to depart from the dynamic wire to prevent the interference from entering.

(4) Other terminal figures

 Wherein, the bus interface CN3 and CN4 are reserved.

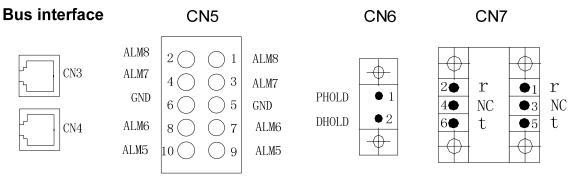





- U, V and W should be connected with the motor winding one by one, which can not be performed reversely.
- The cable and leading-wire should be fixed and can not close to the specified drive unit radiator and motor of AE50 full electric injection molding machine, in order to avoid reducing the insulation performance due to the heat.
- There is a high-capacity electrolytic capacitor inside the specified drive unit of AE50 full electric injection molding machine; the remaining voltage will still hold even if the power is turned off. Do not touch the specified drive unit and motor of AE50 full electric injection molding machine after the power is turned off for 5min.

3.4 Drive Module Terminal Function

1) Power terminal

Terminal No.	Terminal mark	Signal name	Function
TB3-1	Р	DC bus positive terminal	Main circuit DC power input terminal is connected with P, N of TB2 of the power
TB3-2	Ν	DC bus negative terminal	module unit.
TB4-1	PE	Protective	Protective grounding terminal; the

Table 3-3 The function explanations of drive module terminal

		grounding	protective grounding resistance should be
		terminal	less than 0.1Ω , servo motor output and
			power input common
TB4-2	U		
TB4-3	V	3-phase AC	It should be connected with the motor U, V $% \left({{{\mathbf{U}}_{{\mathbf{U}}}} \right)$
		output terminal	and W terminal one by one.
TB4-4	W		
CN5-1	ALM 8	Main circuit	Alarm signal input
CN5-2		open-phase alarm	
CN5-3	ALM 7	Main circuit brake	Alarm signal input
CN5-4		alarm	
CN5-5	GND	Alarm signal	
CN5-6	GND	grounding	Alarm signal grounding
CN5-7		Main circuit	
	ALM 6	under-voltage	Alarm signal input
CN5-8		alarm	
CN5-9		Main circuit	
	ALM 5	over-voltage	Alarm signal input
CN5-10		alarm	
CN6-1	PHOLD		Electric brake relay contactor output
			terminal, the relay actuates when the drive
		Electric brake	unit fault occurs or it stops, external
CN6-2	DHOLD		connection is performed between brake
			resistance and motor ※2
CN7-1			
CN7-2	r	Control power	The control circuit power input/output
CN7-5		single phase input	terminal AC 220V 50Hz is connected with
CN7-5 CN7-6	t	terminal	the r, t of CN7 of the power module unit.
CN7-3	NC		Without connection
CN7-4			

※1: Only the injection drive unit is with CN5 interface in the drive unit and others are reserved.
※2: Different drive module types match with different brake resistance. Refer to the following table

(Wherein, there is no brake resistance of $\ensuremath{\mathsf{DTS01A-050}}\xspace).$

Brake resistance parameter Drive module type		Power (W)
DTS01A-075	1 × 3	450
DTS01A-075	1 × 3	450
DTS01A-300	1 × 3	600 × 3

Table 3-4 The brake resistance specification of each drive module in AE50

2) Control terminal CN1

Table 3-5 Control signal input/output terminal CN1

Terminal No.	Signal name	Mark	I/O	Method	Function
CN1-9	Analog velocity command input	SPD_REF	Туре3		Analog velocity command input terminal, its input voltage range is $-10V \sim +10V$; the corresponding rotation range can be determined by the parameter No.42. For example: If the parameter No.42 is set to 3000, the top analog velocity command voltage corresponds to the rotation speed (R/MIN, -3000r/min \sim 3000r/min). It may be limited as top speed if it exceeds the maximum speed.
CN1-15	Analog velocity grounding	SPD_GND			Analog velocity grounding

CN1-7	Analog torque command input	TQ_REF	Туре3	Analog velocity command input terminal, its input voltage range is $-10V \sim +10V$; the corresponding torque range can be determined by the parameter No.44. For example: it indicates with the percentage of the rated torque. If the rated torque is 30N·m and the setting value is 50, and then the torque of the maximum analog torque command is $30 \times 50 / 100 = 15N \cdot m$.
CN1-11	Analog torque grounding	TQ_GND		Analog torque grounding
CN1-13	Analog value output grounding	WO_GND		Analog value output grounding
CN1-12	Analog torque signal output	TQ_OUT	Type4	The analog torque signal output voltage range is -10V ~ +10V, which is determined the torque range by the parameter No.44. For example: it indicates with the percentage of the rated torque. If the rated torque is $30N \cdot m$ and the setting value is 50, and then the analog torque output range is - $10V \sim +10V$ and its corresponding torque is -15N·m ~ $15N \cdot m$.

CN1-38	Control method shift terminal	SEN	Typel	 Shift the input terminal with servo control method; the shift method can be can be determined by the parameter No.10. Control method shift selection: [0] Do not shift [1] Shift to the analog torque control mode in analog speed control method when SEN closes. [2] Shift to analog (Speed + torque) control mode in the analog speed control mode in the analog torque control mode in the analog torque control method when SEN closes. [4] Shift to analog (speed + torque) control mode in analog torque control method when SEN closes.
CN1-40	Servo enabling	SON	Typel	 Servo enabling input terminal [1] SON ON: the specified drive unit of AE50 full electric injection molding machine operates. [2] SON OFF: the specified drive unit of AE50 full electric injection molding machine stops; the motor is on the free state after stopping operation. Note 1: The motor should be still when the SON OFF is opened before the SON ON. Note 2: The command can be input waiting for at least 50ms after opening to SON ON.
CN1-14	Alarm clear	ALRS	Typel	Alarm clear input terminal [1] ALRS ON: system alarm clears.

				[2] ALRS OFF: system alarm holds.
CN1-42	Speed selection 1 Zero speed clamping	SC1/ZS	Typel	Velocity selection 1 input terminal In the velocity control method, the combination of SC1 and SC2 is used (at present, the SC1 and SC2 are
CN1-22	Servo ready output	SRDY	Type2	Servo ready output terminal [1] SRDY ON: Control power and power module are normal. There is no alarm for the specified drive unit of AE50 full electric injection molding machine; servo ready output ON. [2] SRDY OFF: The power module opens or the DTS01A injection molding machine unit alarms; servo ready output OFF.
CN1-49	Servo alarm output	ALM	Туре2	Servo alarm output terminal [1] ALM ON: There is no alarm for the specified drive unit of AE50 full

					 electric injection molding machine; servo alarm output ON. [2] ALM OFF: There is an alarm for the specified drive unit of AE50 full electric injection molding machine; servo alarm output OFF.
CN1-20	Speed arrival output	SCMP	Type2	S	Speed arrival output terminal The speed arrival outputs ON when the speed arrives or exceeds the setting one.
CN1-21	The common terminal of the output one	DG			The grounding common terminal of control signal output terminal (other than the CZ)
CN-31	Shielding grounding	FG			Shielding grounding cable terminal
CN-32	wire	10			Chiefding grounding cable terminal
CN1-3	S signal	PS+			
CN1-4	output of absolute encoder	PS-			Absolute encoder S signal output

Note: I/O type explanation: 1) Type1: Switch value input; 2) Type2: Switch value output; 3) Type3: analog value input; 4) Type4: Analog value output; 5) Type5: Absolute encoder interface. Refer to "3.5 interface circuit scheme".

3) Feedback signal terminal CN2

Terminal No.	Signal name	Terminal mark		Function
	Mark I/O			
CN2-5				Servo motor photoelectricity encoder
CN2-6	Power output +	VCC		uses +5V power;
CN2-18		VCC		Use the multi-core cable to parallel
CN2-19				when cable is longer.

Table 3-6 Encoder signal input/output terminal CN2

CN2-3	Power output -	GND		
CN2-4				
CN2-1	Encoder DSL +	DSL		
	input	+	Type5	Encoder differential data signal
CN2-2	Encoder DSL -	DSL-	Typee	
	input	DOL-		
CN2-17	Encoder DMA	DMA		
	+ input	+	Type5	Encoder differential clock signal
CN2-16	Encoder DMA -	DMA	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
	input	-		

4) Bus terminal CN3 and CN4

Table 3-7 bus terminal

Terminal No.	Signal name	Function
CN3	RJ-45 Standard interface	It is connected with control system or other units.
CN4	RJ-45 Standard interface	It is connected with control system or other units.

3.5 I/O Interface Circuit

1) Switch value input interface

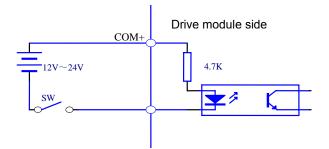


Fig. 3-7 Type1 switch value input interface

(1) It is supplied by user, DC 12 V \sim DC 24V, current ≥100mA;

(2) **Notice:** The specified drive unit of AE50 full electric injection molding machine can not be operated if the current polarity connection is reversed.

2) Switch value output interface

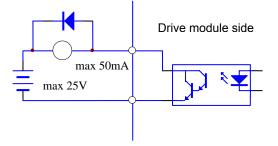


Fig. 3-8 Type2 switch value output interface

(1) The external power is offered by user. It is essential to note that the specified drive unit of AE50 full electric injection molding machine may be damaged if its power polarity is reversed.


(2) The output is open-collector type, and its maximum current is 50mA; the top voltage of external power is 25V. And therefore, the loading of switch value output signal should be met this limit requirement. The specified drive unit of AE50 full electric molding machine may be damaged if it exceeds the limit requirement or the output is directly connected with the power.

(3) The anti-parallel fly-wheel diode should be placed at both ports of the loading if the loading is the relay sensitive one. If the fly-wheel diode is reversed, the specified drive unit of theAE50 full electric injection molding machine may be damaged.

3) Analog value input circuit

The analog input signal is speed command or torque command input signal.

The voltage range of input signal X_REF is -10V \sim 10V.

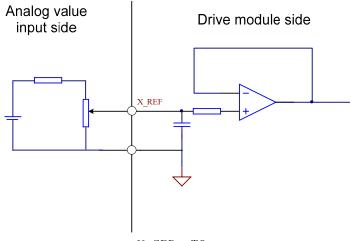

X=SPD、TQ

Fig. 3-9 Analog value input circuit

4) Analog value output circuit

Analog output signal is speed or torque output signal.

The voltage range of output signal X_REF is -10V \sim 10V.

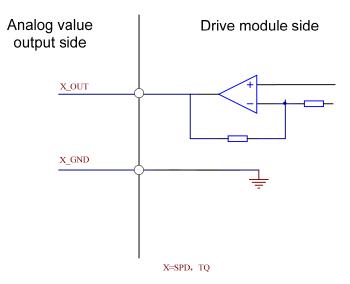


Fig. 3-10 Analog value output circuit

5) Absolute encoder interface


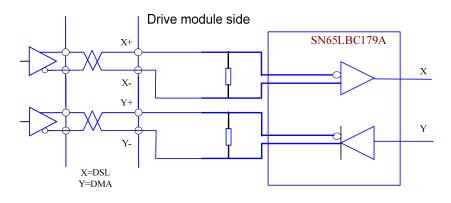


Fig. 3-11 Absolute photoelectricity encoder input interface

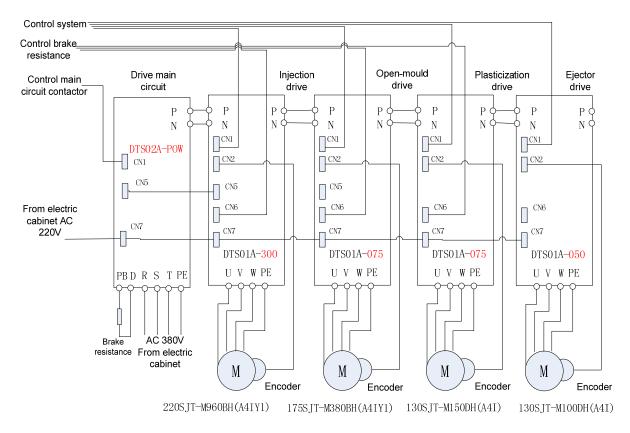


3.6 The Overall Connection Diagram of Drive Unit

Fig. 3-12 The overall connection diagram of AE50 drive unit

The above-mentioned figure shows:

- 1) The CN1 in the drive module is connected with the system, which is used for information exchange;
- The CN1 in the power module and the CN2 in the drive module is connected with the external electric, which is separately controlled the AC380 input of power module and the UVW input of each motor;
- 3) The AC220V of the CN7 interface in power module and the AC380V on TB1 inside the electric cabinet are separated from the electric wire-mesh; Contact GSK for details.

CHAPTER FOUR PARAMETER

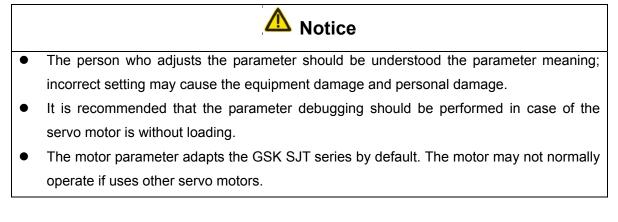

4.1 Parameter List

The following parameters only are suitable for the specified configuration drive module and servo motor of AE50 full electric injection molding machine; and the parameter may different if other drive units or servo motor are used. It is better to refer to the material or contact the GSK.

Table 4-1 The specified configuration drive module and servo motor in AE50

Drive module type	DTS01A-300	DTS01A-075	DTS02A-075	DTS01A-050
Servo motor	220SJT-M960BH	130SJT-M150DH	175SJT-M380BH	130SJT-M100DH
type	(A4IY1)	(A4I)	(A4IY1)	(A4I)
Purpose	Injection motor	Mould-opening	Plasticization motor	Ejector motor drive
rupose	drive	motor drive	drive	

The following parameters are the corresponding PA parameter for the above-mentioned motor and drive module.

Parameter series No.	Parameter name	DTS01A-300	DTS01A-075 (Mould-opening)	DTS01A-075 (Plasticization)	DTS01A-050
0	Password	412	412	412	412
1	Type code	3	1	2	0
2	Software version (read)	104	104	104	104
3	Initial display state	0	0	0	0

Table 4-2 The default PA parameter list of AE50 drive module

Gr → 州数控 The Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual A Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual A Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual A Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual A Specified Drive Unit of AE50 Full Electric Injection Molding Machine User Manual A Specified Drive Unit of AE50 Full Electric Injection A Specified Drive Unit of AE50 Full Electric Injection A Specified Drive Unit of AE50 Full Electric Injection A Specified Drive Unit of AE50 Full A Specified Drive Unit Of AE50 Full A Specified Drive Unit Of AE50 A Specified Drive Unit Of AE50 Full A Specified Drive Unit Of AE50 A Specified Drive Unit A Specified Drive Unit Of AE50 A Spec

4	Control method selection	1	1	1	1
5	Speed proportional gain	100	70	70	60
6	Speed integral time constant	30	80	80	90
7	Torque command filter	300	200	100	100
8	Speed detection low-pass filter	300	300	300	300
9	Reserved				
40	Control method shift	•		<u>^</u>	
10	selection	0	0	0	0
11	Reserved				
12	Reserved				
13	Reserved				
14	Reserved				
15	Reserved				
16	Reserved				
17	Reserved				
18	Analog speed low-pass	800	800	800	800
10	filtering	000			000
19	Analog torque low-pass	800	800	800	800
10	filtering	000	000		000
20	Drive prohibition input	1	1	1	1
	disabled	•			
21	JOG operation speed	120	120	120	120
22	Reserved				
23	Maximum speed limit	2400	3600	2400	3600
24	Internal speed 1	0	0	0	0
25	Internal speed 1	100	100	100	100
26	Internal speed 1	300	300	300	300
27	Internal speed 1	-100	-100	-100	-100
28	Reserved				
29	Positive/negative torque limit	1	1	1	1
30	Reserved				
31	Reserved				
32	Reserved				
33	The slavery machine	0	0	0	0
00	number of industry Ethernet	U	Ŭ	Ū	0
34	Internal CCW torque limit	300	300	300	300
35	Internal CW torque limit	-300	-300	-300	-300

36	External CCW torque limit	300	300	300	300
37	External CW torque limit	-300	-300	-300	-300
38	Speed dry run, JOG run torque limit	300	300	300	300
39	Speed command reverse	0	0	0	0
40	Reserved				
41	Analog speed command zero modification value	0	0	0	0
42	The rotation speed of maximum analog speed command voltage	1550	2500	1000	2500
43	Analog torque command zero modification value	0	0	0	0
44	The torque of maximum analog torque command	300	300	300	300
45	The top speed controlled by torque	1550	2500	1000	2500

CHAPTER FIVE ALARM AND TROUBLESHOOTING

A Notice

- The person who inspects the machine should have the professional knowledge and ability.
- The specified drive unit and motor of AE50 full injection molding machine can be touched after its power is turned off for 5min to prevent the electric shock and burn.
- The specified drive unit of AE50 full electric injection molding machine can be used after the fault removes according to the alarm code.
- Confirm that the SON (Servo enabled) signal is disabled before resetting alarm to prevent the unexpected accident from suddenly starting.

5.1 Alarm List

Alarm code	Alarm name	Content
	Normal	
1	Overspeed	Servo motor speed exceeds setting value
2	Main circuit overvoltage	Main circuit power voltage excessive high
3	Main circuit undervoltage	Main circuit power voltage excessive low
4	Reserved	
5	Motor overheating	Motor temperature excessive high
6	Speed amplifier saturation fault	Speed regulator saturation for long time
7	Drive prohibition abnormal	CCW, CW drive prohibition input OFF
8	Reserved	
9	Encoder fault	Encoder signal error
10	Control power undervoltage	Control power ±15V lower
11	IPM module fault	IPM intelligent module fault
12	Overcurrent	Motor current excessive high
13	Overloading	The specified drive unit of AE 50 full electric injection molding machine and the motor overloading (instantaneous overheating)
14	Open-phase	3-phase AC power open-phase
15	Encoder counting error	Encoder counting abnormal
16	Motor overheating overloading	The electrothermal value of the motor exceeds

Table 5-1 Alarm list

		setting value (I ² t inspection)
17	Speed response fault	Speed response error excessive big
18	FPGA fault	FPGA version inspection error
19	Heat resetting	System is being heat resetting
20	EEPROM error	EEPROM error
21	Brake fault	Brake circuit fault
22	Encoder read error	Fail to read encoder of drive module
23	A/D chip error	A/D convertor error
24	Encoder type error	Inconsistent encoder type
25	Reserved	
26	Reserved	
27	Reserved	
28	Reserved	
29	Reserved	
30	Reserved	
31	Encoder write error	Fail to write encoder of drive module

5.2 Alarm Troubleshooting Method

Alarm code	Alarm name	Operation state	Reason	Troubleshooting
		It occurs when switching on the control power	 Control circuit board fault Encoder fault 	 Change drive module Change servo motor
1	Overspeec	It occurs in the motor operation	Command pulse input frequency excessive high Acceleration/deceleration time constant excessive small, so that the speed overshoot value is excessive big.	Correctly set the command pulse input Increase acceleration/deceleration time constant
	ğ	ie motor c	Encoder fault Encoder cable defective	Change servo motor Change encoder cable
		operation	Instable servo system causing overshoot	 Set the system related gain again. Reduce the loading inertia moment ratio if the gain can not

Table 5-2 Troubleshooting method

				set to an available value.
			Loading inertia excessive big	 Reduce loading inertia Change a bigger power drive unit and motor
		It occurs v is perfc beç	Encoder zero error	 Change servo motor Change encoder cable. The manufacturer should adjust the encoder zero.
		occurs when the motor is performed at the beginning.	 Incorrect connection of U, V and W leading wire Incorrect connection of encoder cable leading wire 	Correct wiring
		otor	Circuit board fault	Change drive module
		It occurs when the control circuit ON	 Power voltage excessive high Abnormal voltage waveform 	Check the power supply
	Main	It occurs when power module ON	Disconnect of the brake resistor	Wiring again
2	ı circuit overvoltage	Main circuit overvoltage lt occurs during the motor operation	 Brake transistor damage Internal brake resistor damage 	Change power module
			Brake circuit capacity inadequate	 Reduce on-off frequency Increase acceleration/ deceleration time constant Reduce torque limit value Reduce loading inertia Change a bigger power drive module and motor
	Main circuit undervoltage	조 퍼 It occurs when 약 power module	 Circuit board fault Power insurance damage Soft-start circuit fault Rectifier damage 	Change the power module
3		ON	 Power voltage low Temporarily cut off more than 20ms 	Check the power
		It occurs during motor operation	 Power capacity inadequate Instantaneously cut off 	Check the power
			Excessive heat radiator	Check the loading
4	Reserved	eserved		
	ove	It occurs when	Circuit board fault	Change the drive module
5	Motor overheating	control power ON	 Cable disconnection Relay damage inside the motor temperature 	 Check cable Check motor

		It occurs during motor operation	Motor over-loading	 Reduce loading Reduce on-off frequency Reduce torque limit value Reduce the related gain Change a bigger power drive module and motor 	
			Internal motor fault	Change servo motor	
	s o		Motor chuck by machinery	Check the loading machinery part	
6	Speed amplifier saturation fault	It occurs during motor operation	Loading excessive big	 Reduce loading Change a bigger power drive module and motor 	
7	Drive prohibition abnormal		Input terminals OFF of CCW and CW drive prohibition	 Check wiring, input terminal uses power Correctly set the related parameter 	
8	Reserved		Encoder wiring error	Check the wiring	
	Ш		Encoder wiring error Encoder damage	Check the wiring Change the motor	
			Defective cable of encoder	Change the cable	
9	Encoder fault		Excessive long of encoder cable to cause the encoder voltage low	 Shorten cable Power with multi-core parallel 	
	Control		Lower control internal 15V input	Check the control power	
10	nower		 Defective connector inside the power module Switch power abnormal Chip damaged 	 Change power module Check connector Check switch power 	
		It occurs when control power ON	Circuit board fault	Change the drive module	
	IPM module fault	IPM m	 Power supply voltage lower Overheating 	 Check drive module Power-on again Change drive module 	
11		It occurs during	Short-circuit among the drive unit U, V and W	Check the wiring	
	faul	motor operation Defective g	Defective grounding	Correct grounding	
	4		Motor insulation damage	Change the motor	
			Interfered	 Increase circuit filter Far away from interference source 	
			Short-circuit among the drive unit U, V and W	Check the wiring	
	Overcurrent		Defective grounding	Correct grounding	
12	rcur		Motor insulation damage	Change the motor	
	rent		Drive module damage	Change the drive module	

18	FPGA fault		FPGA version signal read error	Change the bigger power for the specified drive unit and motor of AE50 full electric injection molding machine	
17	Speed response slow	It occurs during motor operation	Speed response deviation excessive big	 Check encoder wiring Check whether the parameter configuration is correct. Change drive unit 	
16	Motor heat overloading	It occurs during motor operation	Long time operation with the excessive rated torque Defective machinery driving	 Check loading Reduce on-off frequency Reduce torque limit value Change a bigger power for the specified drive unit and motor of AE50 full electric injection molding machine Check machinery part 	
	Motor h	It occurs when control power ON	Circuit board fault Incorrect parameter setting	Change the bigger power for the specified drive unit of AE50 full electric injection molding machine Correctly set the related parameter	
15	counting		Encoder damage Incorrect encoder wiring Defective grounding	Change the motor Check the wiring Correct grounding	
14	Open-pha se alarm		380V 3-phase AC open-phase	Check 3-phase AC power module	
			 One phase of U,V and W disconnected for the specified drive unit of AE50 full electric injection molding machine Incorrect encoder wiring 	Check the wiring	
	ading	It occurs during motor operation	Motor instable oscillation	 Adjust gain Increase acceleration/ deceleration time Reduce loading inertia 	
13	Overloading		Operation with excessive rated torque Hold brake close	 Check loading Reduce on-off frequency Reduce torque limit value Change a bigger power of DST01A injection molding machine drive unit and motor Check the hold brake 	
		It occurs when control power ON	Circuit board fault	Change the specified drive unit of AE50 full electric injection molding machine	

			Instable control power input	Check the control power
19	Heat resetting		To be interfered	①Increase circuit filter ②Far away from interference source
20	EEPROM Error	Chip or circuit board damage		Change the specified drive unit of AE50 full electric injection molding machine. Set the specified drive unit type (Parameter No.1) of AE50 full electric injection molding machine again after alter renovating, and then recover the default parameter.
		It occurs when control power ON	Circuit board fault	Change the specified drive unit of AE50 full electric injection molding machine
1			Brake resistance wiring OFF	Wiring again
	œ		 Brake transistor damage Internal brake resistor damage 	Change into the related type drive module
21	Brake fault	It occurs during motor operation	Brake circuit capacity inadequate	 Reduce on-off frequency Increase acceleration /deceleration time constant Reduce torque limit value Reduce loading inertia Change a bigger power for the specified drive unit and motor of AE50 full electric injection molding machine
			Main voltage excessive high	Check power module
22	Encoder read error		 ①Encoder cable damage ②Encoder damaged on motor ③Circuit board damaged of drive module ④Interfered by foreign electromagnetism 	 ①Change encoder cable ②Change the encoder on the motor ③Change circuit board ④Remove interference resource
23	A/D core error		①Chip or circuit board damage ②Current sensor damage	Change the specified drive unit of AE50 full electric injection molding machine
24	Encoder type error	It occurs when control power ON	①Encoder selection error ②Parameter setting error	①Change encoder②Set encoder parameter
31	Encoder write error	It occurs during encoder zero	 Encoder cable damage Encoder on the motor damaged The interference from foreign electromagnetism 	 Change encoder cable Change the encoder on the motor Far away from interference source

CHAPTER SIX DISPLAY AND OPERATION

6.1 Power Module Display

Observe whether the main circuit operation is normal by the ALARM and STATUS indicators on the power module; refer to the following table.

STATUS	ALARM	Explanation Display information		
0	0		Without main circuit power (AC380)	
0	1	ALARM indicator flash	Start resistor burnt (Unrecoverable, it is better to change the resistance from factory)	
0	1	During operation	Main circuit alarms (overvoltage, undervoltage, open-phase and brake)	
0	1	At the moment of power off	f The power during releasing the main circuit.	
1	0		Normal	

Table 6-1 The display information of power module indicator

Note: 0 means OFF, 1 means ON

6.2 The Keyboard Operation of Drive Module

The specified drive unit panel of AE50 full electric injection molding machine composes of 6 LED nixie-tube displays and 4 buttons ①, ①, ← and Enter, which is displayed various states and setting parameter etc. Refer to the following button functions:

: Series No. or numerical value increase, or option forward

U: Series No. or numerical value decrease, or option backward

E: Return to the previous operation menu, or cancel the operation

Enter: Enter the next operation menu, or input the confirmation

Note: Hold the $\boxed{1}$ and $\boxed{1}$, the operations are repeatedly performed; the longer of the hold time is, the faster the repeated speed is.

- 6-digit LED nixie-tube displays each state and data of the system; the decimal point of the overall nixie-tube or the most right one flashes, which means the alarm occurs.
- The operation is performed based upon the multilayer menu; the 1st layer is main

menu, which includes 8 operation methods; the 2nd one is the function menu under each operation method. Refer to Fig. 6-1 Main menu operation frame:

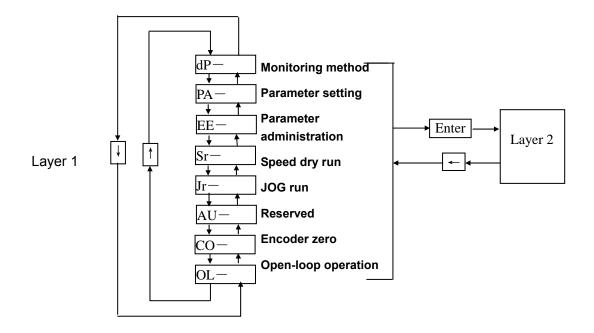


Fig. 6-1 Method operation frame

6.3 The Monitoring Method of Drive Module

Select "dP-" at the 1st layer, then enter the monitoring method by pressing Enter. There are 21 kinds display states, and user select the desired display mode by \uparrow or \downarrow , enter the concrete display state by the Enter again.

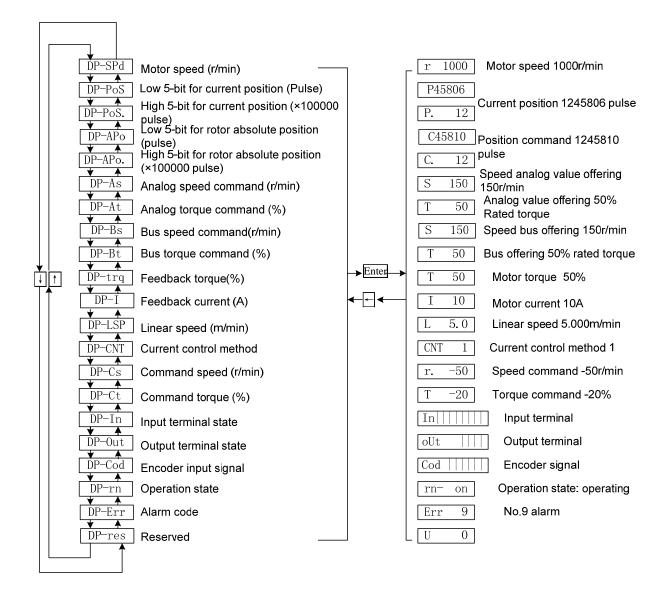


Fig. 6-2 The operation frame of monitoring method

Note 1: The pulse value unit is inside the system one. For example: the pulse value expresses with high 5-bit + low 5-bit matching with the 10000 pulse/rotation motor, the calculation method is shown below:

Pulse value = alue 5 - bit numerical value $\times 100000 + 0005$ - bit numerical value

Note 2: Control method: 1 Analog speed + torque control mode; 2 Analog speed control mode; 4 Switch value speed control mode; 5 Speed dry run mode; 6 JOG mode; 7 Analog torque control mode; 8 Industry Ethernet control mode; 10 Encoder zero; 11 Open-loop operation.

Note 3: If the display number reaches to 6-bit (For example: -12345), the prompt character will not be displayed. **Note 4:** The calculation method of the motor current I is as follows:

$$I = \sqrt{\frac{2}{3}(I_U^2 + I_V^2 + I_W^2)}$$

Note 5: The rotor absolute position in the one-turn means that the rotor's position related to the stator, for example, one-turn is regarded as a period, its range is $0 \sim 131072$. The rotor position information is increase counting when motor is positive, and it is decrease one in negative.

Note 6: Figure 6-3 shows the input terminal; the Figure 6-4 indicates the output terminal.

Note 7: Operation states are shown below:

- "rn- oFF": Main circuit uncharged, servo system without operation;
- "rn- CH": Main circuit charged, servo system without operation (Servo without enabling or with alarm);
- "rn- on": Main circuit charged, servo system with operation.

Note 8: "Err --" means normal and without alarm.

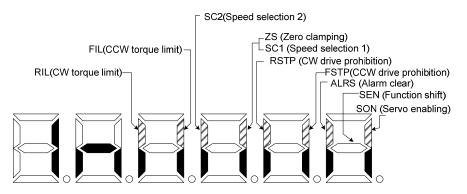


Fig. 6-3 Input terminal display (Stroke lights up that means ON, and vice versa)


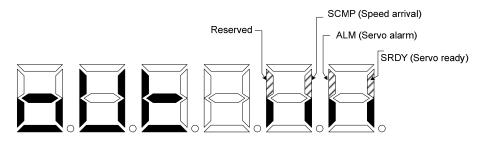


Fig. 6-4 Output terminal display (Stroke lights up that means ON, and vice versa)

6.4 Speed Dry Run and JOG Operation

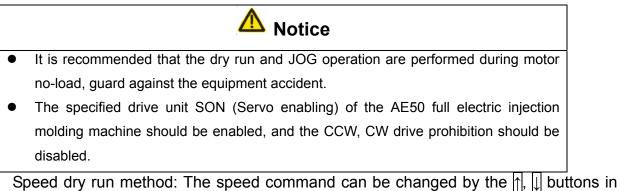

Speed dry run method: The speed command can be changed by the $[\underline{1}]$, $[\underline{1}]$ buttons in this method. The motor will operate based upon the supplied speed and direction. It is only used by the factory.

JOG operation method (JOG operation method): Press the \uparrow and hold it, the motor operates according to the JOG speed; the motor stops releasing this button and hold zero speed; press \downarrow and hold it, the motor reversely operates based on the JOG speed; the motor stops releasing this button and hold zero speed. It is only used by factory.

6.5 Analog Speed Operation

Set the parameter No.4 to 2, select the analog speed operation mode.

The CN1-5(SPD_REF) pin of the servo CN1 terminal is connected with the external speed command input, and the CN1-15(SPD_GND) pin is connected with external analog speed signal grounding. The motor rotation speed can be controlled by adjusting the external analog input value.

The servo motor operation speed of the external analog voltage 10V can be set by the parameter No.42.

For example:

Parameter No.42 = 1500 means that the motor's top speed is 1500r/min (factory setting) when it is set to 10V input.

Parameter No.42 = 3000 means that the motor's maximum speed is 3000r/min when it is set to 10V input.

Precautions: The setting of the parameter No.23 will affect the actual speed of the motor. The motor speed is 1500, if the parameter No.23 is set to 1500, the parameter 42 is set to 3000 and the external input is set to 5V. However, the motor's speed will hold at the 1500 even if the analog voltage increases consecutively. Accordingly, the setting value of the parameter No.23 should be modified at the same time to meet the capacity requirements.

6.6 Analog Torque Operation

Set the parameter No.4 to 7, select the analog torque operation mode.

The CN1-7(TQ_REF) pin of the servo CN1 terminal connects with the external command input; the CN1-11(TQ_GND) pin connects with the external analog signal grounding. The motor torque can be controlled by adjusting the external analog input value.

The servo motor torque output value corresponding to the external analog voltage can be set to 10V by the parameter No.44.

For example:

Parameter No.44 = 100 means the setting motor at the rated torque operation when it is set to 10V input. (Factory setting).

Parameter No.44 = 300 means that the setting motor is 3 times operation of the rated torque when it is set to 10V input.

The top torque of the speed arrival is determined by the parameter No.45 and 23 together. The maximum speed is the minimum value between parameter No.45 and 23.

6.7 Analog Speed + Analog Torque Operation

Set the parameter No.4 to 1, select the analog speed + analog torque operation mode.

The CN1-5(SPD_REF) pin of the CN1 terminal connects with the external speed command input; the CN1-15(SPD_GND) pin connects with the external analog speed signal grounding; the CN1-7(TQ_REF) pin connects with the analog speed command input; CN1-11(TQ_GND) connects with the external analog torque signal grounding. The speed and torque can be separately controlled in this control mode.

Refer to the Section 6.7 analog sped operation and the Section 6.8 analogy torque operation for the parameter setting method.


6.8 Other Control Methods

The encoder zero function is used only by factory, user can not perform it. The open-loop method is only used by factory, user can not perform it.

6.9 Analog Value Input Command Zero

Although the command voltage is set to "0V", the motor may still perform with a slight speed when the speed and torque are controlled. This is caused with the slight value (mV Unit) "offset" from the previous level equipment or external command voltage. The zero modification can be performed by the Parameter No.41 analog speed and No.43 analog torque command zero modification values; the external analog input value is set to "0V" by this "offset value"; the values both the DP-As and DP-At are treated as zero, and then the motor will not perform the slight rotation offset.

CHAPTER SEVEN POWER-ON OPERATION

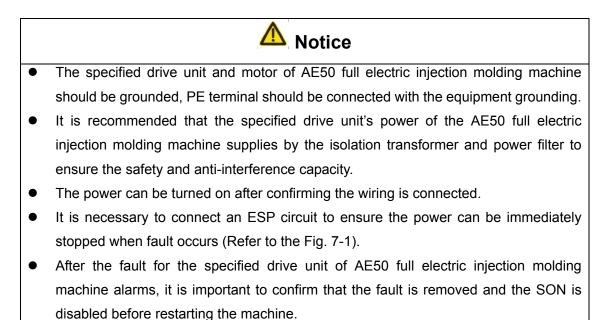

- Do not touch the specified drive unit and motor of the AE50 full electric injection molding machine after the power is turned off for 5min at least to prevent the electric shock.
- The specified drive unit and motor of the AE50 full electric injection molding machine may heat up after it operates for a period time to avoid burnt.

7.1 Power Connection

Refer to the Fig. 7-1 for the power connection, and connect the power based upon the following sequence.

- The power is connected to the input terminal R, S and T of the injection molding machine power module DTS02A-POW. The DC bus output terminal P and N of the servo drive power module are separately connected to the P and N input terminals of the servo drive module. Wherein, the power module PB and D should be connected with a brake resistance.
- 2) The power r, t of the control circuit is connected with the power module or prior to the main circuit; if only the control circuit power is turned on, the servo ready signal (SRDY) is then OFF.
- 3) The main circuit power delays 1.5s after it is turned on, servo ready signal (SRDY) ON. In this case, the servo enabling (SON) signal can be accepted, and then inspect an effective servo enabling. The specified drive unit output of the AE50 full

electric injection molding machine is enabled and the motor excites in the operation state. The servo enabling is disabled or alarms, the PWM circuit inside the drive module closes and the motor is on the electric brake state.

- The PWM circuit is turned on after 1.5s when servo enabling is connected with the power.
- 5) The soft-start and dynamic brake circuits may be damaged frequently turning on/off the power; up to 5 times/hour and below 30 times/day of the on/off frequency. The power can be turned on again after cooling 30min when the fault is removed if the specified drive unit or motor of the AE50 full electric injection molding machine is overheating.

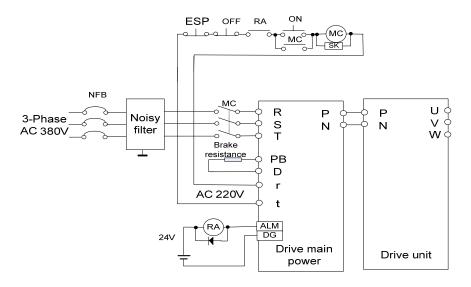


Fig. 7-1 Power module wiring

Power-on time sequence and alarm sequence:

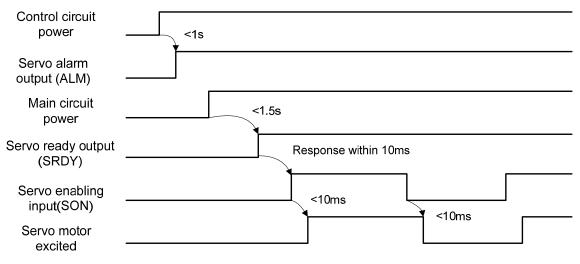


Fig. 7-2 Power-on time sequence

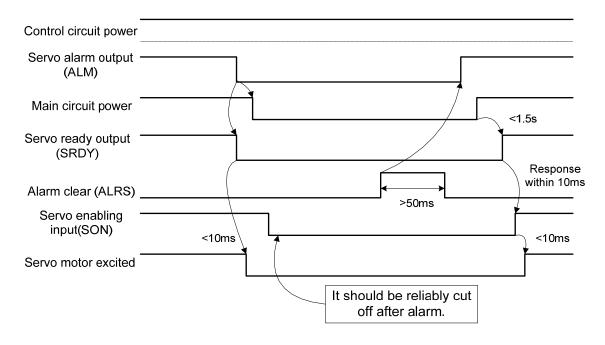


Fig. 7-3 Alarm time sequence

7.2 Inspection Before the Operation

Firstly inspect the following items before the power is turned on, meanwhile after the installation and connection are performed.

- Inspect whether the power terminal wiring is correct and the input voltage is reliable and proper.
- Inspect whether the power and motor cables are short-circuited or grounded.
- Inspect whether the encoder cable connection is correct.
- Inspect the control signal terminal connection is accurate and the power polar and dimension are correct.
- Inspect the specified drive unit and motor of AE50 full electric injection molding machine is firmly fixed.
- Inspect whether the motor shaft is connected the loading.

7.3 Motor Response Adjustment



- Incorrect parameter setting may cause equipment damage and hazard; confirm whether the parameter is correct before starting.
- It is recommended to perform the loading debugging after the no-load one is executed.

Analog speed control

- (1) [Speed proportional gain] The setting value of the parameter No.5 is set as bigger as possible without vibration. Generally, the bigger the loading inertia is, the bigger the setting value of the [Speed proportional gain] is.
- (2) [Analog speed command modification value] The setting value of the parameter No.41 is the zero offset compensation value of the analog speed input. The setting value of the parameter No.42 is set the maximum analog voltage corresponding top motor rotation speed. The setting value of the parameter No.18 is the low-pass coefficient of analog speed input; the bigger the setting value is, the higher the cut-off frequency is.
- (3) [Speed integral time constant] The setting value of the parameter No.6 is set as bigger as possible based upon the specified condition. The response speed may rise when the [Speed integral time constant] is set to excessive big, but it is easy to vibrate. And therefore, it is better to set as bigger as possible without vibration condition. The speed appears a bigger change along with the loading alteration when the [Speed integral time constant] is set as excessive small. In general, the bigger the loading inertial is, the smaller of the setting value of the [Speed integral time constant] is.

• Analog torque control

- (1) Set the suitable [Speed proportional gain] and [Speed integral time constant].
- (2) [Analog torque command modification value] The setting of the parameter No.43 is zero offset compensation of analog input. The setting of the parameter No.44, set the top analog voltage corresponding the maximum motor torque (percentage rated torque). The setting of the parameter No.19 is the analog torque input low-pass filter coefficient; the bigger the setting value is, the higher the cut-off frequency is.

CHAPTER EIGHT PRODUCT TECHNOLOGY SPECIFICATION



The specified drive unit of the AE50 full electric injection molding machine should be matched with the servo motor; this manual describes the adapted GSK SJT series servo motor. It is better to note before ordering if user matches other factory's servo motor.

8.1 The Technology Specification of Power Module

Table 8-1 The power module parameter for the specified drive unit of AE50 full electric injection molding machine

Type Item	DTS02A-POW
Rated output power (kW)	40
Input voltage (V)	AC 380V
Output voltage (V)	DC 538V
Pressure (V)	800
Brake resistance (Ω)	10
Brake resistance power (W)	2000

8.2 The Technology Specification of Drive Module

Table 8-2 The main parameter for the specified drive unit of AE50 full electric injection molding machine

Driv	ve unit type	DTS01A-050	DTS01A-075	DTS01A-075	DTS01A-300	
In	put power	Bus voltage DC 538V				
Use	Temperature	Working: 0°C∼55	°C Storage & transportation: -20°C ~+70°C			
	Humidity	Le	s than 90% (Without condensation)			
ambient	Vibration	Less than 0.5G (4	1.9m/s ^²), 10 Hz∼6	0 Hz (Non-consec	utive operation)	

(1) Applag append L applag targue (2) Applag append control mode (al made (0) Owitab	
Control method		(1) Analog speed + analog torque (2) Analog speed control mode (3) Switch				
		value speed control mode (4) Speed dry run mode (5) JOG mode (6) Analog				
		torque control mode	(7) Encoder zer	o method (8) Open-lo	pop mode	
Dyn	amic brake		E>	kternal		
		Speed frequency response: ≥200Hz				
		Speed wave rate: $<\pm0.03$ (Loading 0 \sim 100%);				
		<±0.02	× (0.9~1.1) Po	wer voltage		
Co		(The numerical v	alue correspor	ids the rates speed)		
ntro		Speed	l-regulation ration	o: 1:5000		
l ch	Signal input	Speed command	Command	\/altaga_rang		
Control character		input	voltage	Voltage rang	Je DC±10V	
ter		Torque command	Command	Voltage rang		
		input	voltage	voltage rang		
	Internal	There are 4 internal	There are 4 internal speed modes can be selected based upon the external			
	speed	control input signal				
		①Servo enabling ②Alarm clear ③CCW drive prohibition ④CW drive				
Co	ontrol input	prohibition (5)Speed selection 1/zero speed clamping (6)Speed selection 2				
		CCW torque limit <a>CW torque limit <a>O Control method shift				
Со	ntrol output	①Servo ready output ②Servo alarm output ③Speed arrival output				
Acceler	ration/decelera	Parameter setting acceleration/deceleration time 1 ms \sim 10000ms (0r/min \sim				
tion fun	iction	1000r/min)				
		Rotation, current position, motor torque, motor current, linear speed, rotor				
Monit	oring function	absolute position, operation status, input/output terminal signal, analog				
		speed input, analogy torque input command etc.				
Prote	ctive function	Overspeed, power module overvoltage/undervoltage, overcurrent,				
11010		overloading, brake abnormal, encoder abnormal, control power abnormal				
		etc.				
	ay, operation	6- bit LED nixie tube, 4 buttons				
Available loading		Less than the 5 times of motor inertia				
inertia						
Dime	ension (mm)	502×120×301	502×120×30	1 502×120×301	502×250×301	
•		•			•	

8.3 Servo Motor Specification

The following table is the parameter explanation of AE50 full electric injection molding machine standard configuration servo motor. The motor specifications may differ from the product alteration; it is better to touch the factory or refer to the machine itself.

Туре	130SJT-M100DH	130SJT-M150DH	175SJT-M380BH	220SJT-M960BH	
Item	(A4I)	(A4I)	(A4IY1)	(A4IY1)	
Polar logarithm	4	4	3	4	
Drive module input voltage (V)	AC 3-phase 380				
Rated current (A)	6.4	11	15	45	
Rated torque (N·m)	10	15	38	96	
Rated speed (r/min)	2500	2500	1500	1500	
Rotor inertia (kg·m²)	2.42×10⁻³	3.6×10 ⁻³	14.8×10⁻³	27.5×10 ⁻³	

Table 8-3 The main parameter of AE50 standard configuration motor

Note: Refer to the motor user manual for the concrete parameters and specifications.